 


Wooden Doll House

Assembly instructions

Please retain this information
for future reference

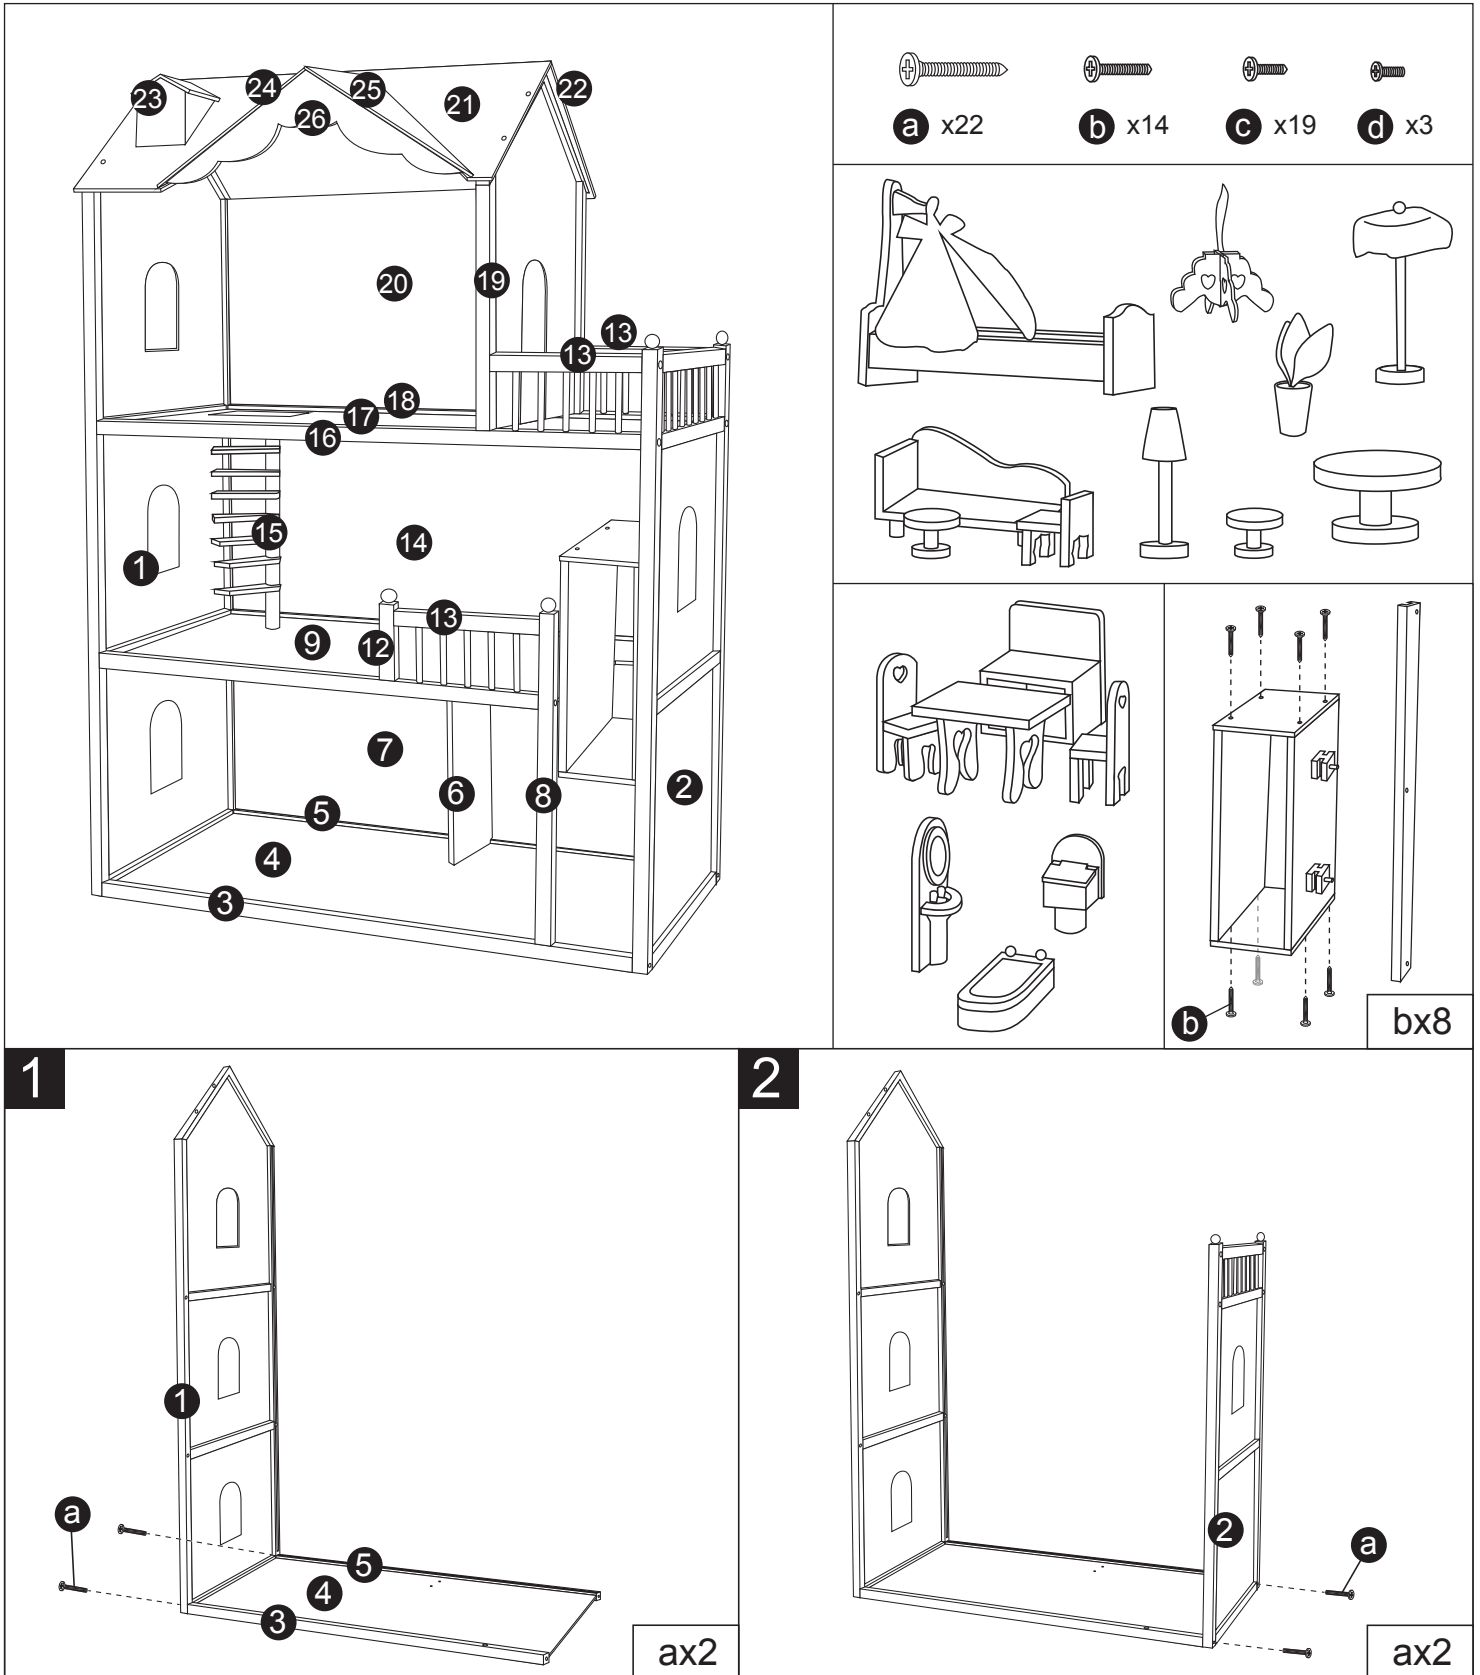

WARNING:

 
ADULT ASSEMBLY REQUIRED.

Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.

CHOKING HAZARD. Small parts and sharp points, not suitable for children under 3 years.




3

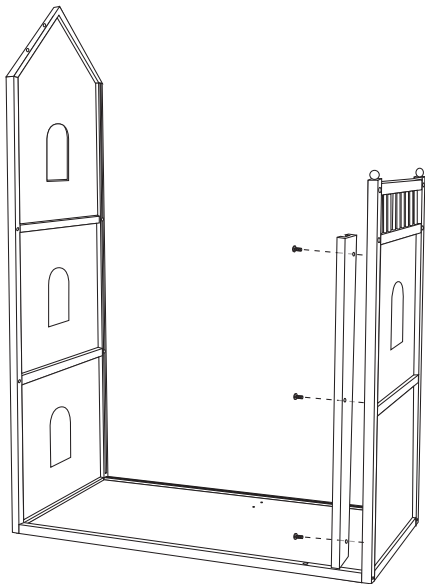


dx3

 4

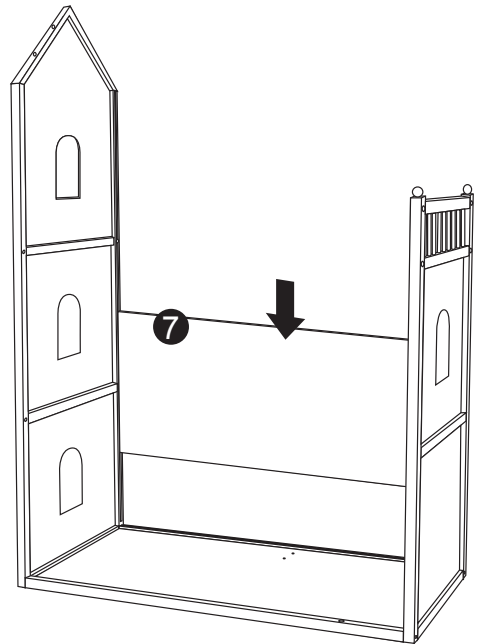


5

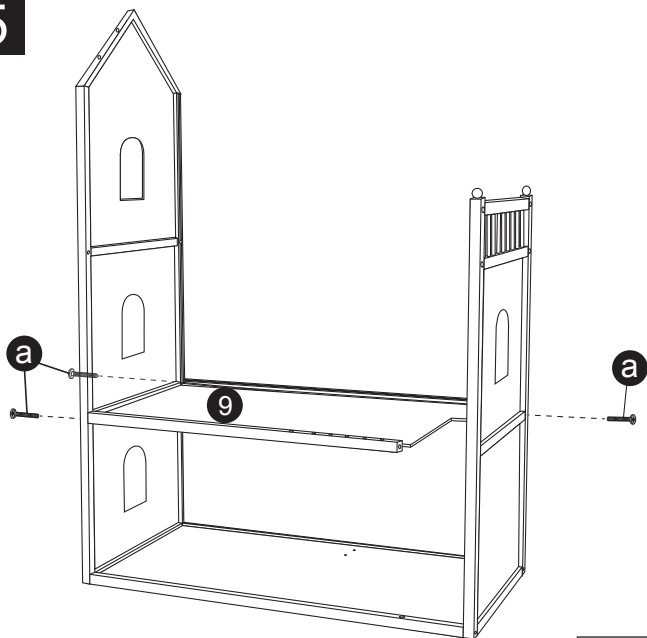 


ax3

 6

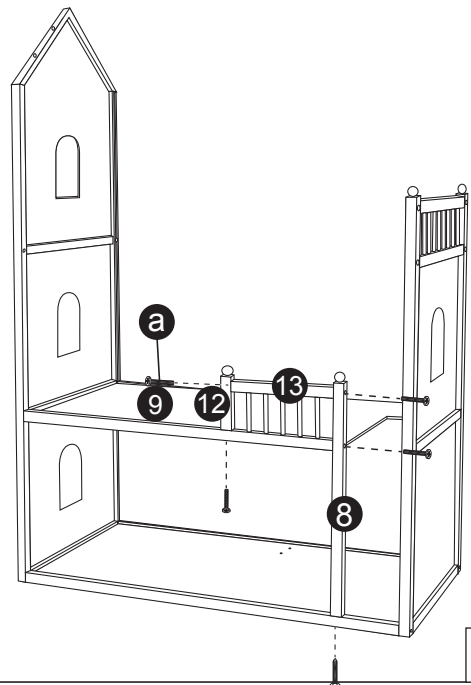


ax5

 
7

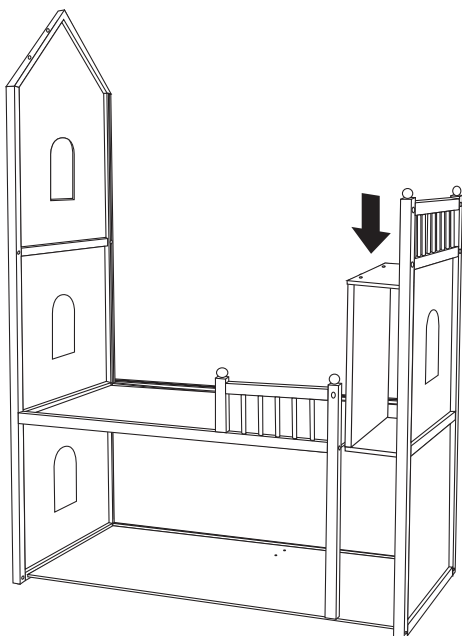


8

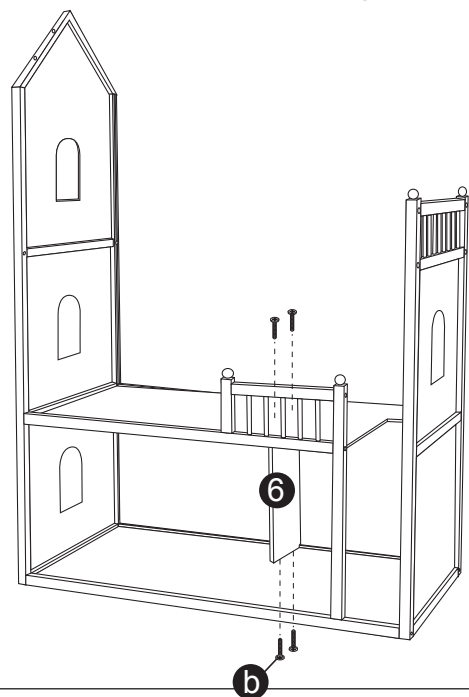 

bx4

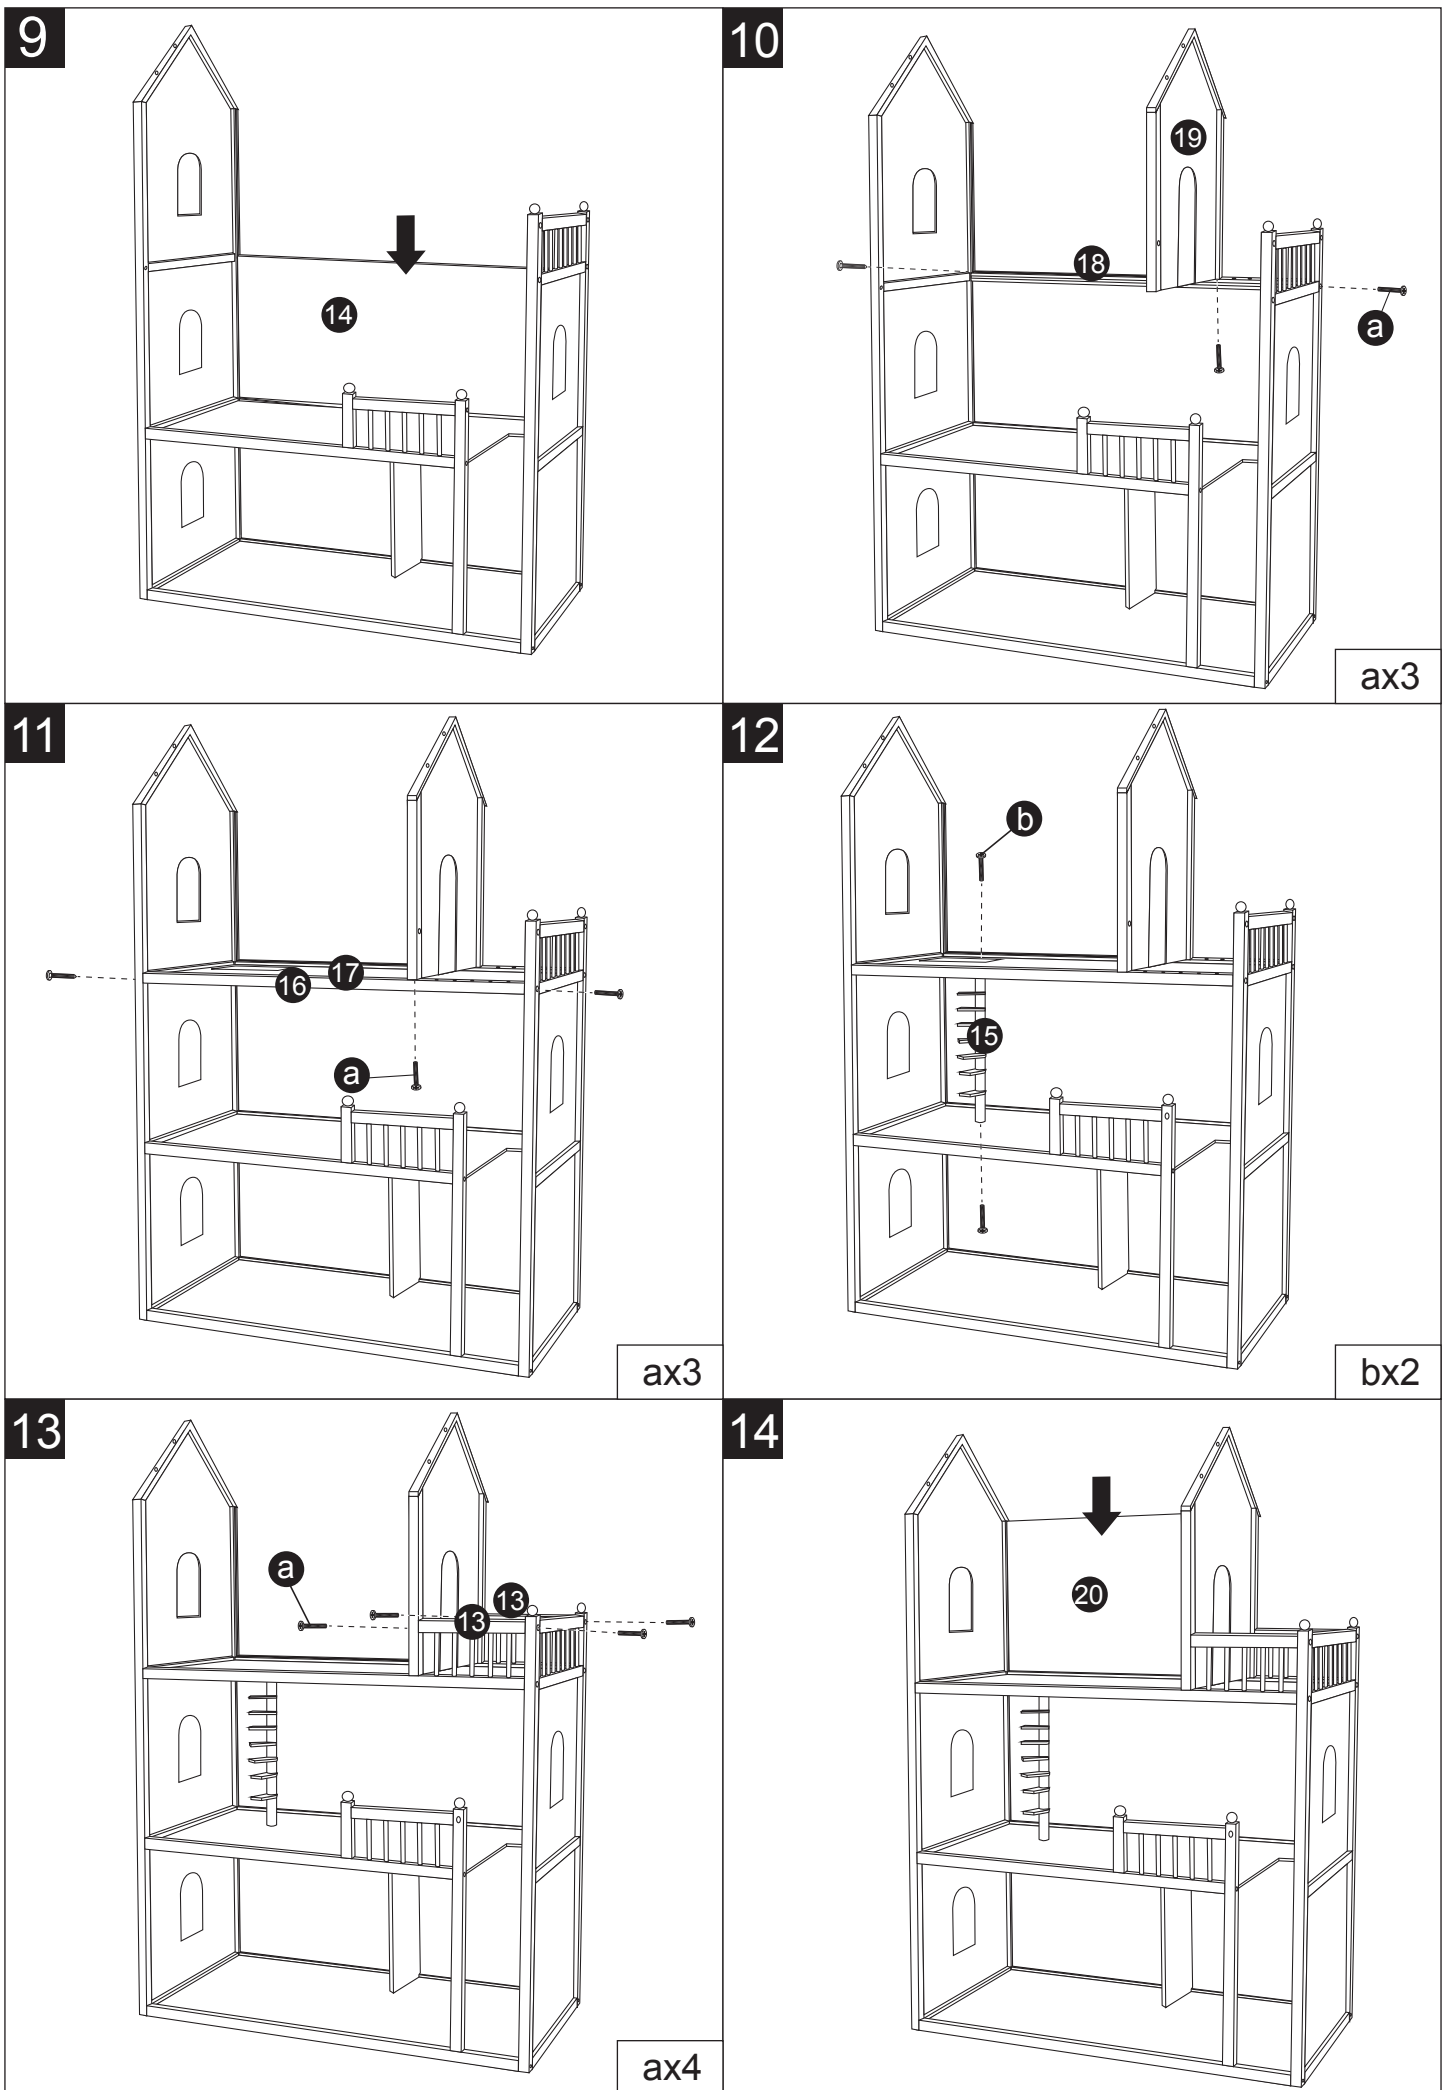 


15

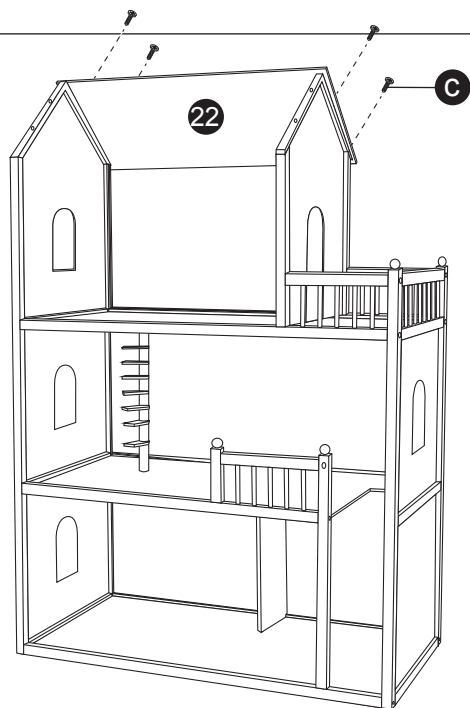 


cx4

 16

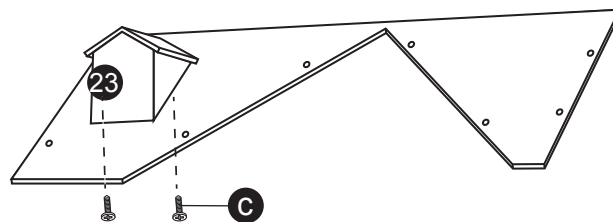


cx2

 17

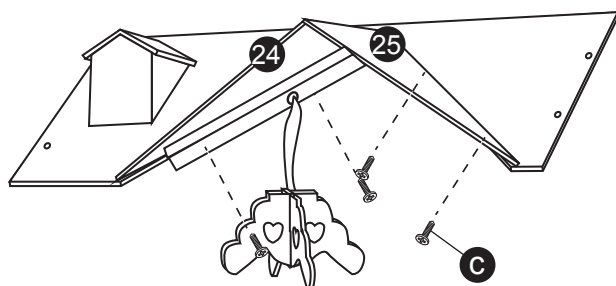


cx4

 18

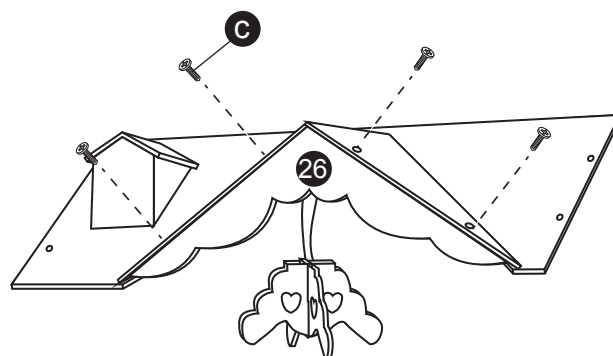

cx4

 19

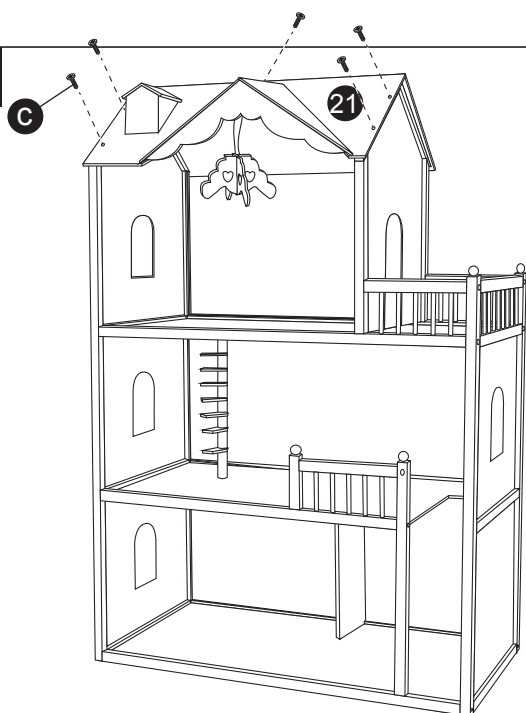

cx5

20

