 



Wooden Toy Kitchen

Assembly instructions


Please retain this information for future reference

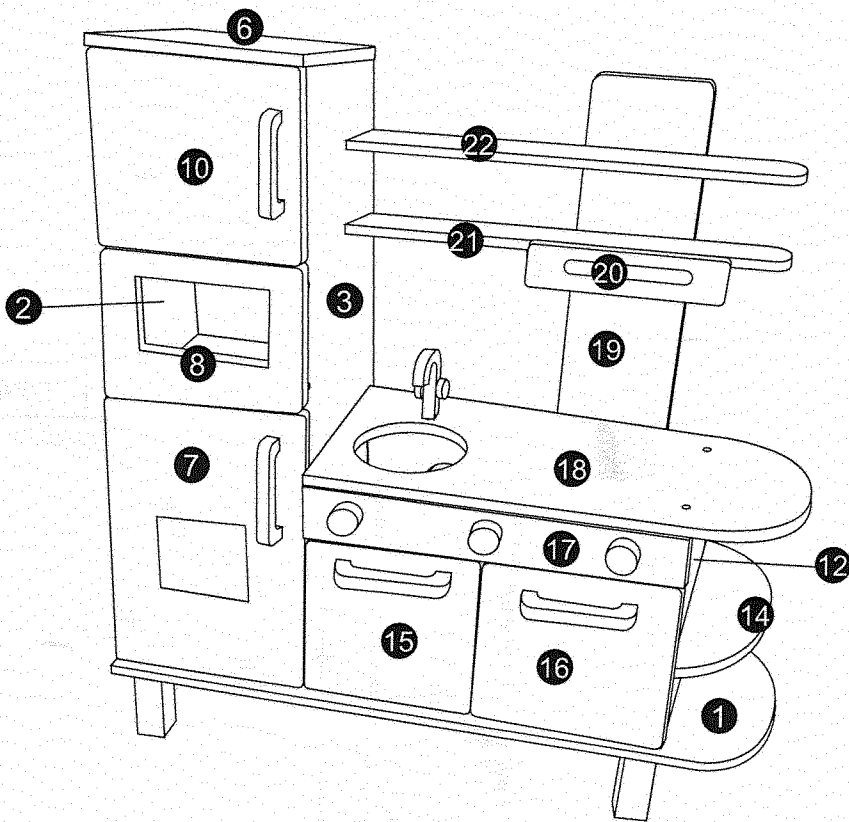

 
4 x2

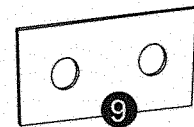

9

 


5

 

x1



 11




x4



x5



 24



a x5



b x12



c x33



d x16

 


e x4




f x2

1

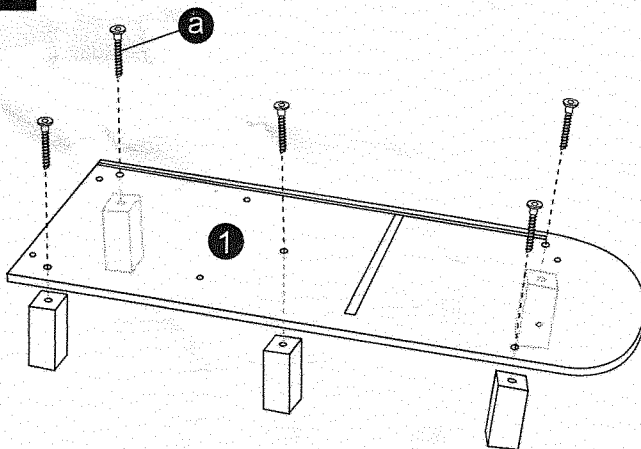

ax4

 2

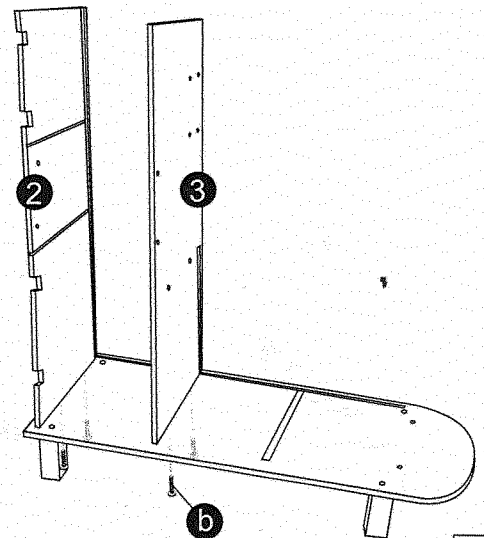


bx4




Warning! Choking Hazard. Keep Small Parts away from children under 3 years.
The toy must be fully cleaned before any contact with food.
Remove the packaging material and any hardware before you give this toy to your child.
Adult Assembly required.



 3

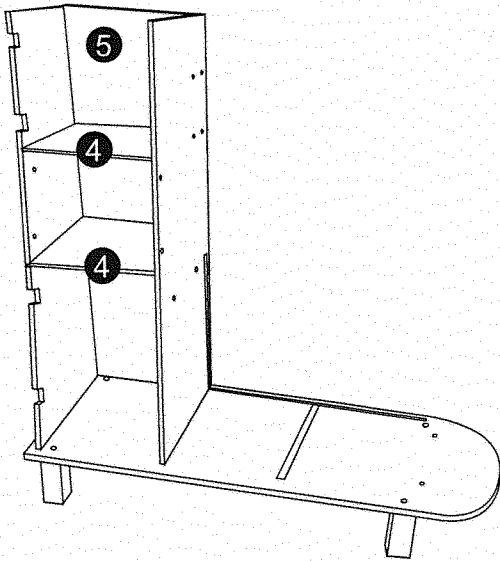


4

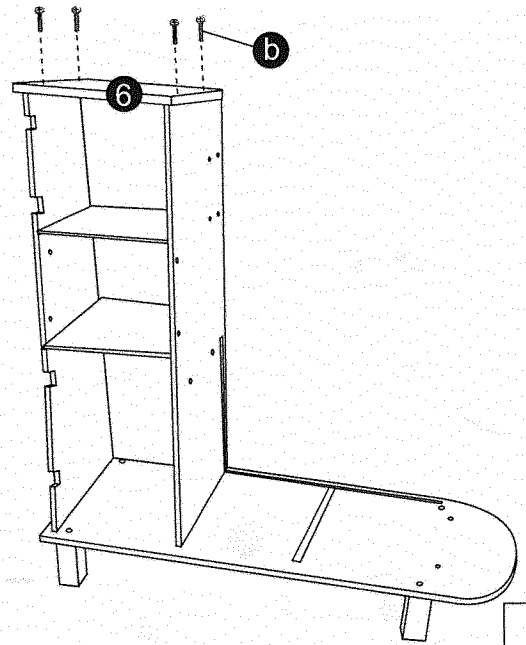 


bx4

 5

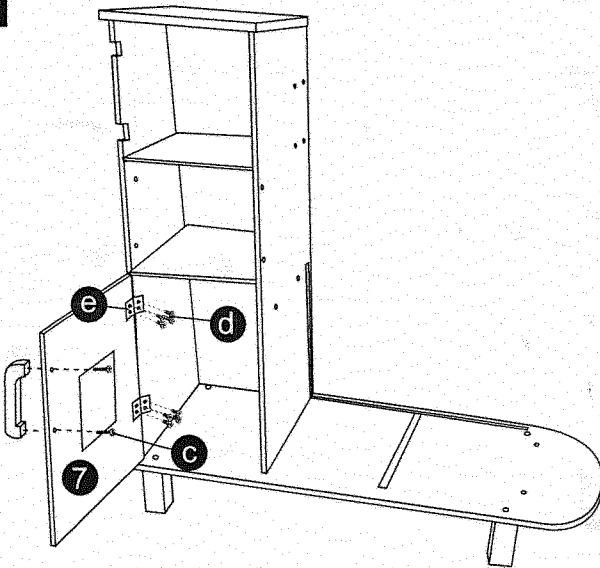


cx2 dx8 ex2

 6

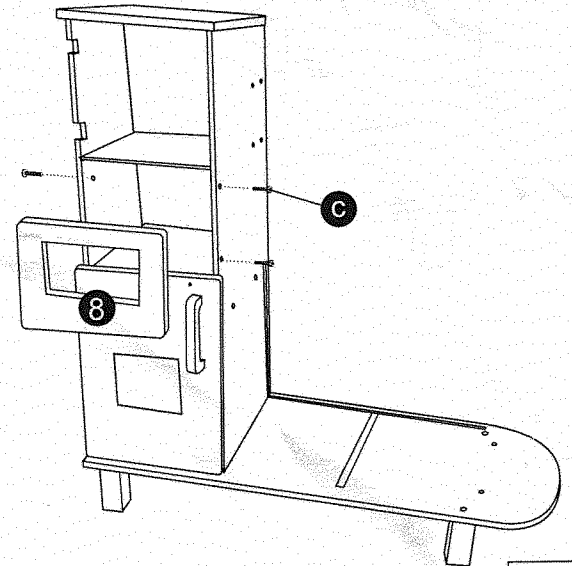


cx4

 7

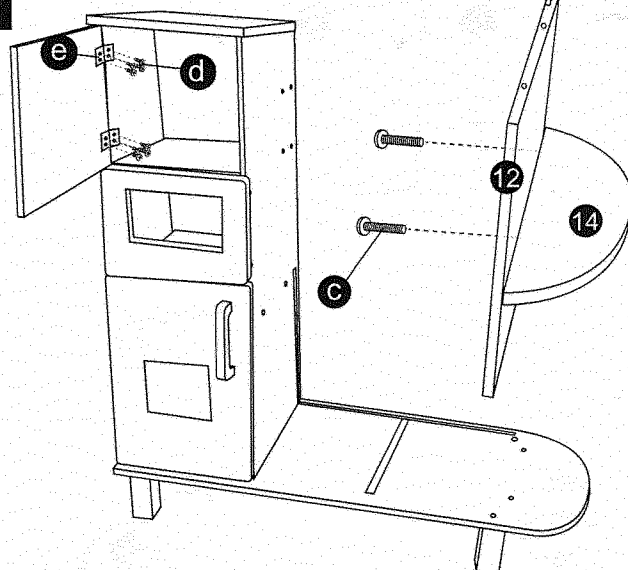


cx2 dx8 ex2

 8

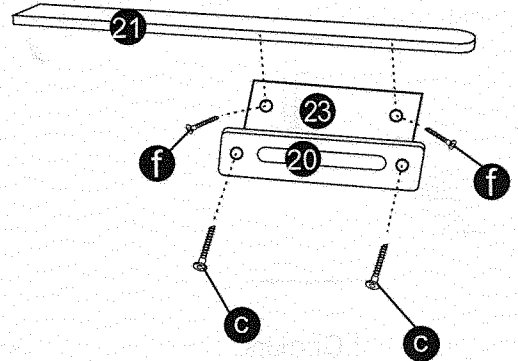


cx2 fx2

 9

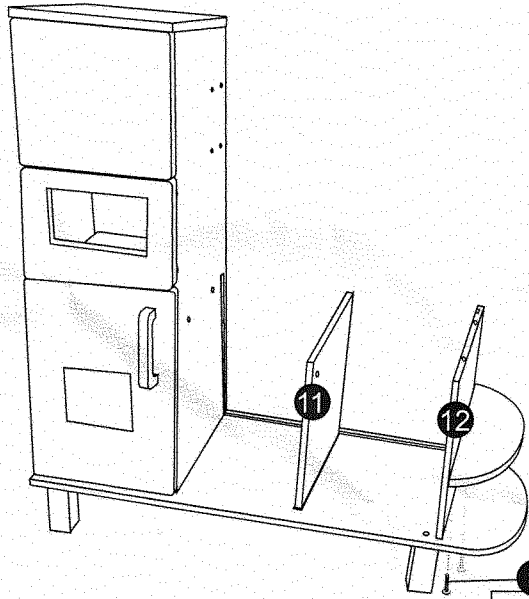


bx2

 10

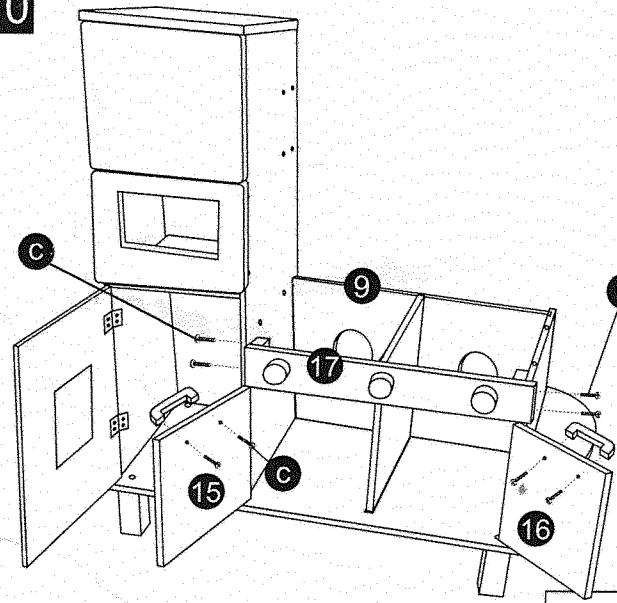


cx8

 11

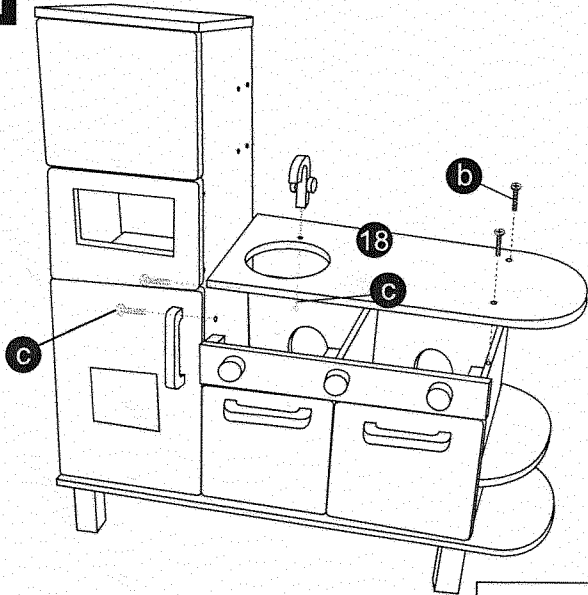


bx2 cx3

 12

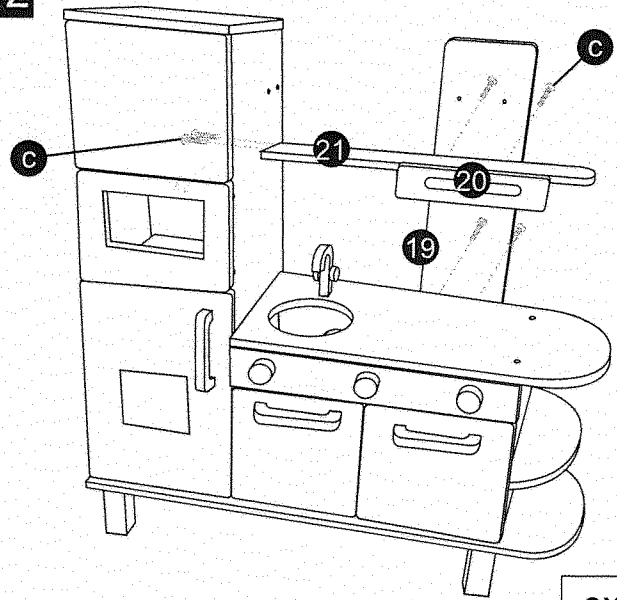

cx6

 13

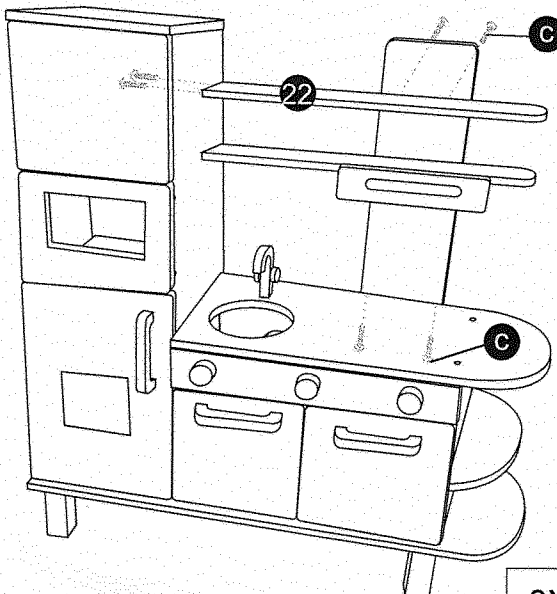

cx6

14

