 


# Wooden Toy Kitchen





## Assembly instructions

Please retain this information for future reference

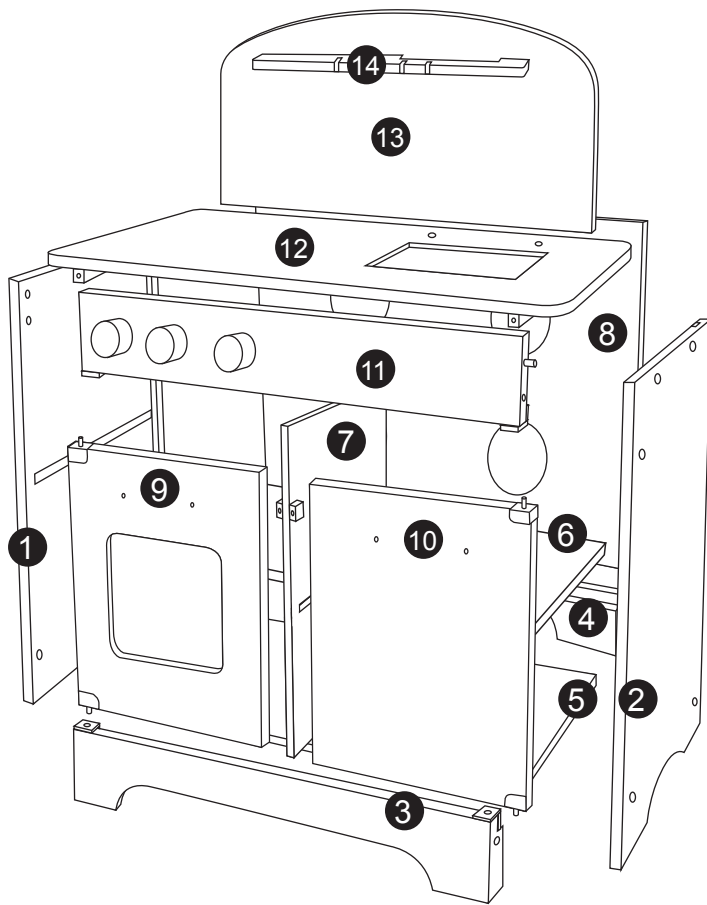

 bx15

     cx8

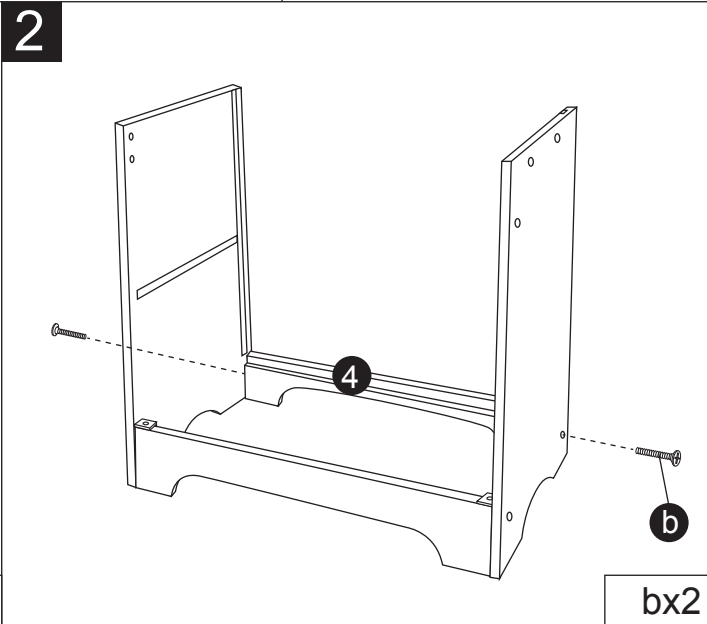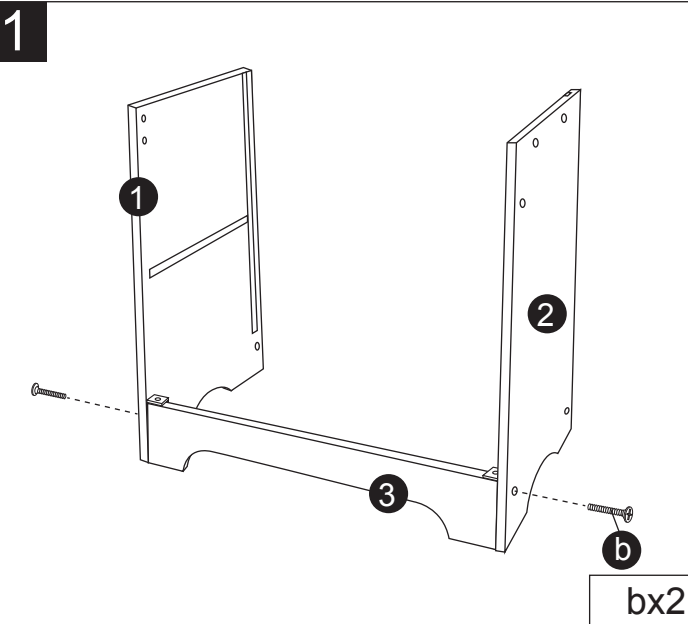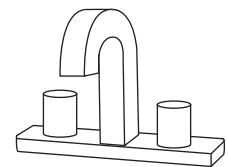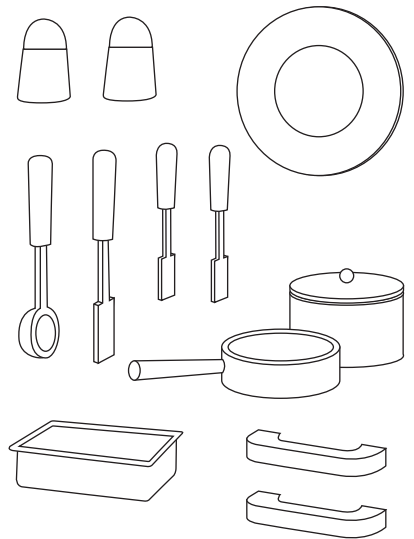

**WARNING:**

ADULT ASSEMBLY REQUIRED.

 
Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state.

Keep unassembled parts away from children.


CHOKING HAZARD. Small parts and sharp points, not suitable for children under 3 years.




3

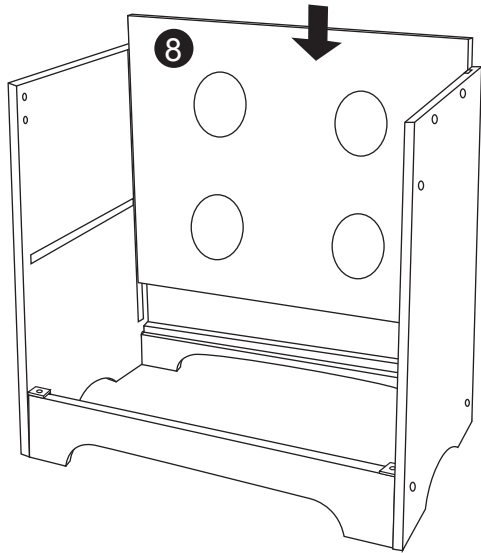

4

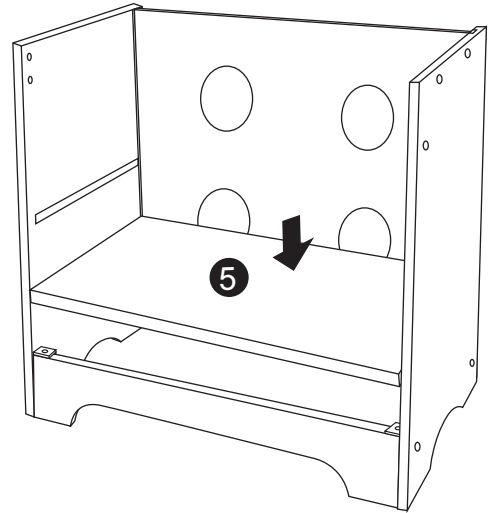 


5

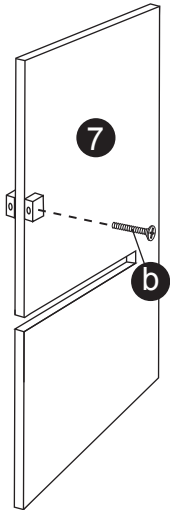 


bx1

 
6

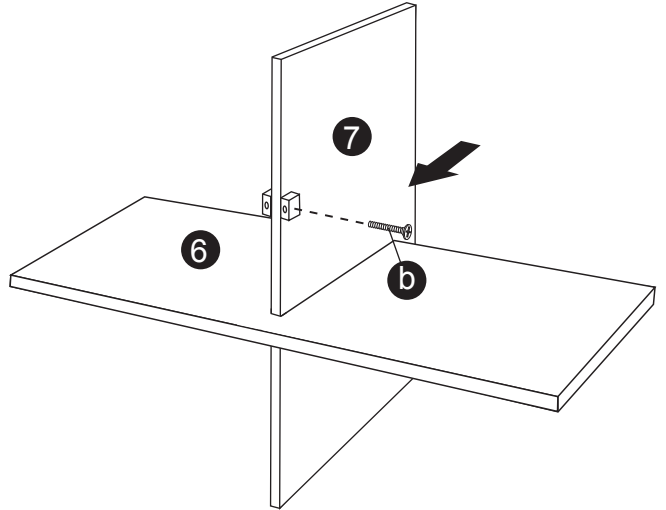

7

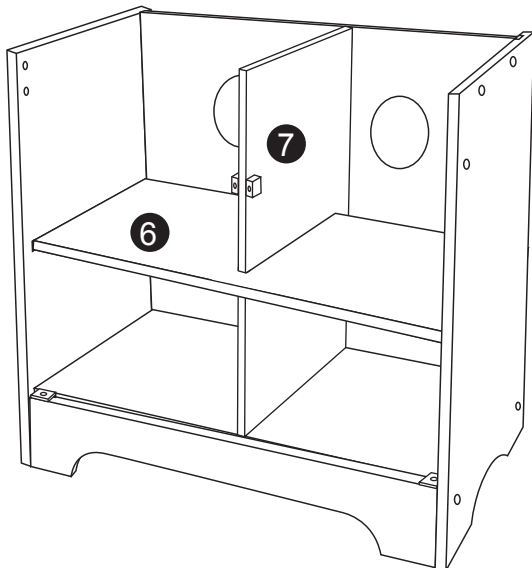 


8

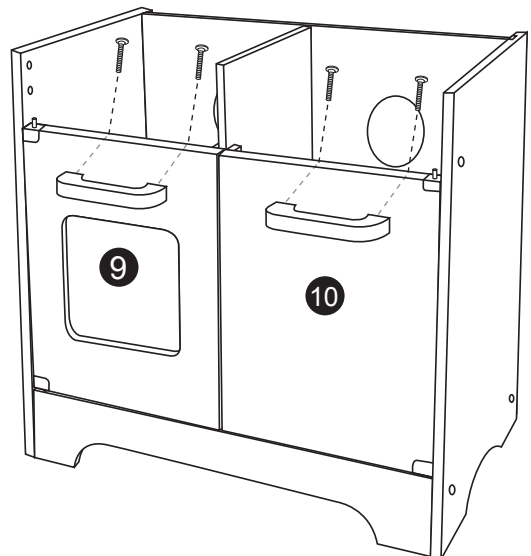 


bx4

 9

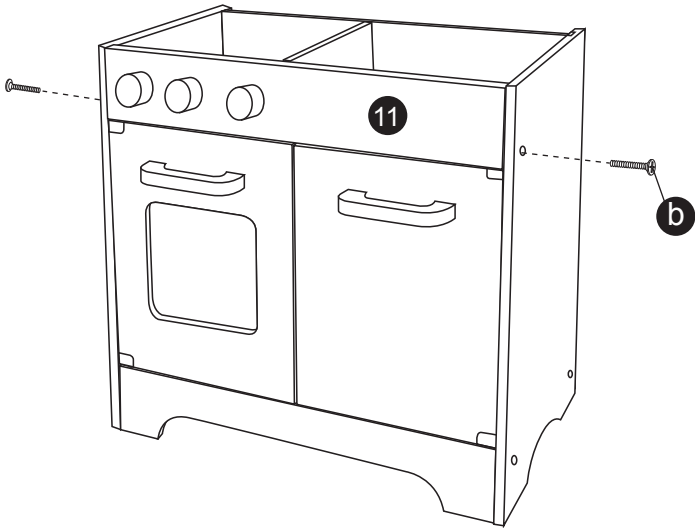


bx2

 10

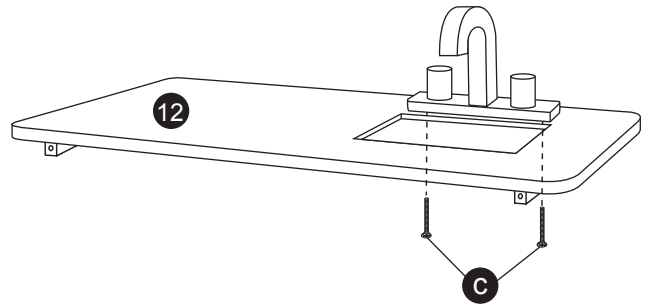


cx2

 11

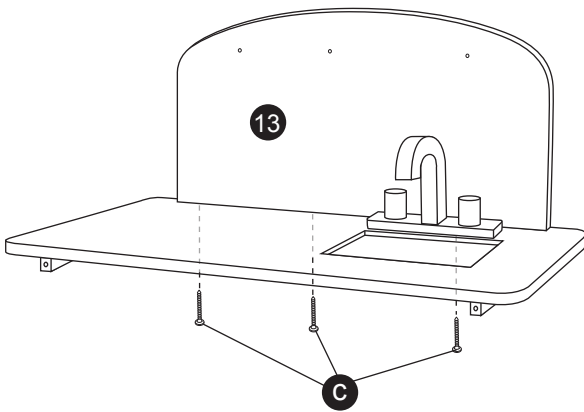


cx3

 12

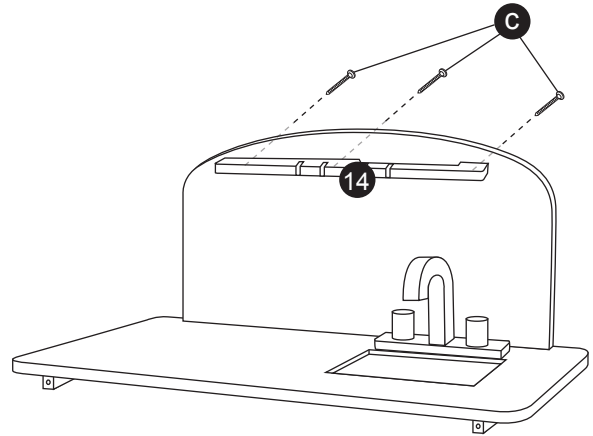

cx3

 13

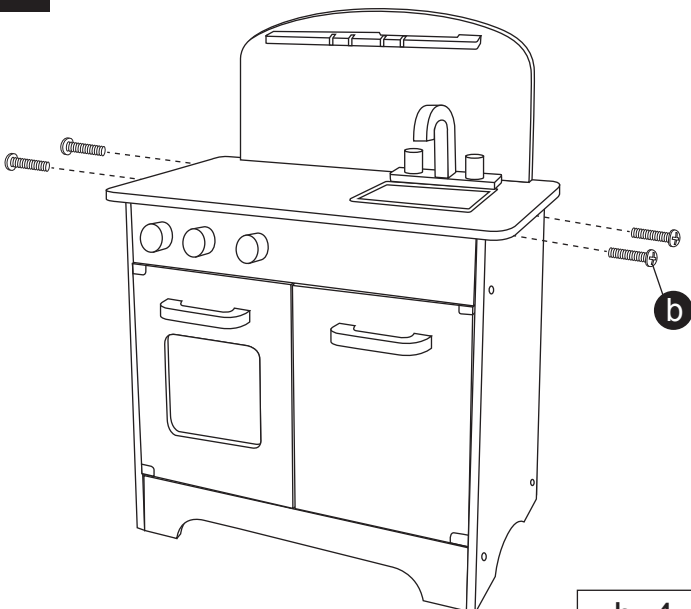

bx4

14

